# DATA SHEET



## Flange Mounted Series



- Zirconium dioxide (ZrO<sub>2</sub>) sensing elements
- Long life, non-depleting technology
- Integral heating element
- High accuracy
- Requires an external interface board to operate<sup>1</sup>





DESIGN • MANUFACTURE • CUSTOMISE • CONFIGURE

### Response Time



### **Heater Voltage**



### **Gas Temp**



### **Termination**





### 👨 BENEFITS

- No reference gas required
- No need for temperature stabilisation
- Flange mounting

### **OUTPUT VALUES**

Oxygen pressure range 2mbar—3bar max 5mbar max Accuracy 700°C Internal operational temp

Response time (10—90% step) < 4s Warm up time (prior to sensor operation) 60s Warm up time (from standby) 20s

Output stabilisation time ~ 180s

## TECHNICAL SPECIFICATIONS

Heater voltage<sup>2</sup>

Operating  $4.35V_{DC} \pm 0.1V_{DC} (1.85A)$ 

Standby  $2V_{DC}(0.85A)$ 

Pump impedance at 700°C<sup>3</sup> < 6kΩ

-100°C to +400°C Permissible gas temperature

0-10 m/s Gas flow rate

Repetitive permissible acceleration 5g Incidental permissible acceleration 30g Other sensor options available on request, email: technical@sstsensing.com

> Need help? Ask the expert Tel: + 44 (0)1236 459 020 and ask for "Technical"







- Interface board sold separately; contact technical@sstsensing.com for details.
- It is important to measure the heater voltage as close to the sensor as possible due to voltage drops in the supply cable.
- The constant current source used in the pump circuit should be designed to drive a load of up to  $6k\Omega$ .

## OUTLINE DRAWING


All dimensions shown in mm.

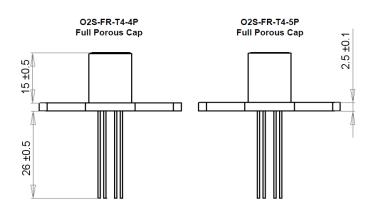

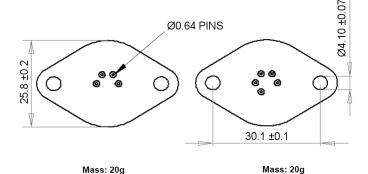




#### 02S-FR-T4-4P

 

Wire	Designation
Р	Pump
С	Common
Н	Heater
S	Sense
F	Heater connection on flange (ground)

### O2S-FR-T4-5P

 

Wire	Designation
Р	Pump
С	Common
H1	Heater (1)
S	Sense
H2	Heater (2)

#### Notes:

- 1. Sensor pins must NOT be soldered. Connections should be crimped onto the pins.
- Ø4.1mm mounting holes should be used as second heater connection (on 4-pin product only) and should be grounded.



### ORDER INFORMATION

Generate your specific part number using the convention shown below. Use only those letters and numbers that correspond to the sensor options you require — omit those you do not.



•
Termination
<b>4</b> 4-pin
<b>5</b> 5-pin



Do not exceed maximum ratings and ensure sensor(s) are operated in accordance with their requirements.

Carefully follow all wiring instructions. Incorrect wiring can cause permanent damage to the device.

Zirconium dioxide sensors are damaged by the presence of silicone. Vapours (organic silicone compounds) from RTV rubbers and sealants are known to poison oxygen sensors and MUST be avoided. Do NOT use chemical cleaning agents.

Failure to comply with these instructions may result in product damage.

## INFORMATION

As customer applications are outside of SST Sensing Ltd.'s control, the information provided is given without legal responsibility. Customers should test under their own conditions to ensure that the equipment is suitable for their intended application.

For detailed information on the sensor operation refer to application note AN0043 Operating Principle and Construction of Zirconium Dioxide Oxygen Sensors.

For technical assistance or advice, please email: technical@sstsensing.com

General Note: SST Sensing Ltd. reserves the right to make changes to product specifications without notice or liability. All information is subject to SST Sensing Ltd.'s own data and considered accurate at time of going to print.

RoHS

### **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

SST Sensing: O2S-FR-T4-5P